

**MODEL:AS7101**  
**OWNER'S MANUAL**



PLEASE READ BEFORE USE

## 1 Getting Started

### Welcome

Thank you for purchasing a Uniden phone.


**NOTE** : Illustrations in this manual are used for explanation purposes.  
Some illustrations in this manual may differ from the actual unit .

### Features Review

Big Button  
Ringer ON/OFF  
Tone/Pulse  
Wall Mountable  
Flash[100/300/600]  
Redial

### Accessories ( included )

1. Base unit
2. Handset
3. Telephone line cord
4. Handset cord
5. User manual

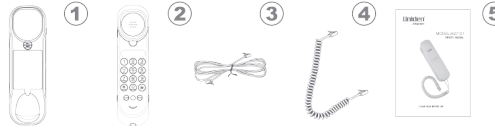

**NOTE** :If you find any of the parts missing, please contact your local shop where you buy this product at once.


### Modular Jack Requirements

Your need an RJ11C type modular jack,which is the most common type of phone jack and might look like the one pictured here.If you don't have a modular jack,call your local phone company to find out how to get one installed.



### Installing The Phone

Your telephone should be placed on a level surface such as a desktop or you can mount it on a wall.

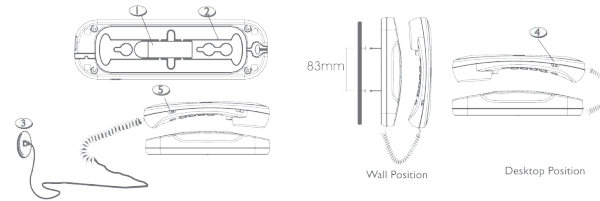

1. Remove telephone line cord from the pocket on the bottom of the phone.
2. Run telephone line cord through the guides on the bottom of the phone.
3. Connect the telephone line cord to a modular telephone jack.
4. Slide the RINGER switch (on the handset ) to ON.
5. Set PULSE/TONE switch (on the handset) to TONE for touch-tone service.  
Or set it to PULSE for rotary service. IF you don't know which type of service you have,check with the phone company.

## 2 Setting

### Receiving A Phone Call

1. Be sure the RINGER switch is set to the (ON) position.
2. When the phone rings,lift the handset and begin your conversation.
3. Slide the RINGER switch to the (OFF) position when you do not want to be interrupted by the phone ringing.

### Ringer Volume


you may control the ringer volume level with the ringer switch.  
ON = ringer tone will be loud.  
OFF = telephone will not ring.

### Placing Phone Call

1. Lift the handset and wait for a dial tone.
2. Dial the telephone number you wish to call.

### Flash Button

Press the FLASH button instead of using the hook switch to activate customer calling services such as call waiting or call transfer, which are provided by your local phone company, select the appropriate flash timing (on handset, 600ms,300ms,100ms).

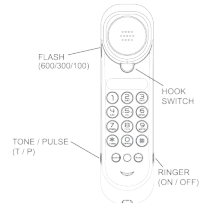

### Redial Button

This unit redials up to 32 digits.To automatically redial the last number you called:

1. Pick up the handset to get a dial tone.
2. Press redial.

### Temporary Tone Feature

If you have Pulse (rotary) service,and want to access customer calling services that require touch - tone dialing, such as getting information from a local bank, you can use this feature.

## 2 Setting

- 1.Press the TONE button ( \* ) after you have connected to the service in order to enable touch - tone dialing.
2. When you hang up, the phone automatically returns to pulse dialing mode.

## 3 Troubleshooting

### No Dial Tone

- Check all cabling to make sure that all connections are secure and not damaged .
- Ensure the telephone line cord is securely connected to the modular jack.
- Connect another phone to the same modular jack .If it does not work , the problem might be your wiring or local service .
- Use another telephone line .

### Incoming voice too low or none at all

- Check and adjust volume control setting .

## 4 Safety Instructions

Take special care to follow the safety suggestions listed below .  
Please do not use telephone during thunderstorm.

### Installations Environment

1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescentlamps).
- 2.Do NOT expose to direct sunlight or moisture.
- 3.Do not install the telephone during thunderstorm.
- 4.Clean the phone with a soft cloth.
- 5.Never use a strong cleaning agent or abrasive powder because this will damage this unit.
6. Avoid dropping the handset,as well as other rough treatment to the phone.

### Placement

1. Do not place heavy objects on top of this unit .
2. Care should be taken so that objects do not fall onto, and liquid into ,the unit .Do not subject this unit to excessive smoke ,dust,mechanical vibration or shock .

**WARNING** : To prevent fire or shock hazard , do not expose this product to rain or any type of moisture.