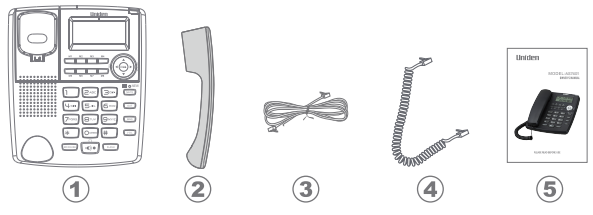 
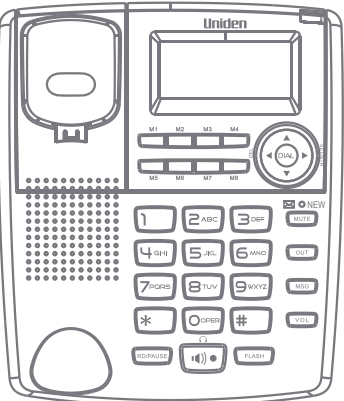 
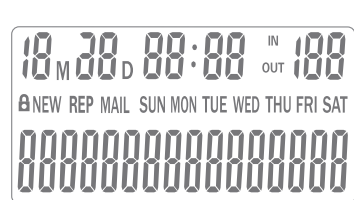 
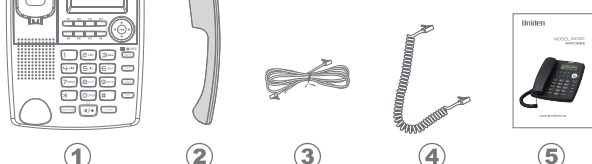 
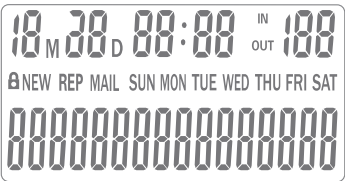 


1 入門指南 歡迎 非常感謝您選購Uniden產品。 備注：此說明書中插圖僅供參考，與實物可能有差異。 功能描述 • FSK/DTMF雙制式來電顯示 • 8首鈴聲選擇 • 去電：最多16組8位，進行動態存儲，最長可存儲32位 • 來電：最多62組8位 • 8組16位單鍵記憶 • FLASH時間1000ms/600ms/300ms/110ms可選 • 鬧鐘功能 • 2檔免提音量調節 • 3檔鈴聲音量調節及鈴聲關功能 • 信息留言指示 • 靜音功能 • 30組12位號碼黑名单功能 • DND免打擾功能 • 5位區域碼設置 • 2位出局碼設置 • 新來電指示燈 *來電顯示功能取決於您當地的電訊服務商。		2 設置操作 配件清單(包含) 1.主機 3.電話直線 5.說明書 2.手柄 4.曲線  備注:如發現配件缺失，請聯繫當地購買商。 控制器位置  LCD 顯示  1 18.08.08-08 日期、時間 2 IN 來電 3 OUT 去電 4 4 NEW REP MAIL VIP、新來電、重覆、郵件 5 0000000000000000 號碼顯示 6 SUN MON TUE WED THU FRI SAT 日期 2 設置操作 掛機狀態下按【SET/STR】鍵，進入設置狀態，LCD顯示SEt : dRxE，此時，按【▲】、【▼】鍵可改變設置項，LCD同時顯示對應的設置項。再按【SET/STR】鍵進入該項設置。在某項設置完成後，按【SET/STR】鍵進入下一項設置。所有設置均用【▲】、【▼】鍵修改該具體設置項，用【DEL】鍵退出設置狀態。 設置日期/時間 掛機狀態下按【SET/STR】鍵再按【▲】、【▼】鍵選擇設置項，LCD顯示SEt : dRxE，按【SET/STR】鍵確認。進入日期/時間設置，		3 掛機操作 刪除 在掛機設置狀態，按【DEL】鍵用來退出設置；在預撥狀態，按【DEL】鍵用來刪除錯誤輸入的號碼；按【▲】、【▼】鍵查詢來電號碼及【OUT】鍵撥出號碼時按【DEL】鍵用來刪除此信息，長按【DEL】鍵3秒可刪除所有來電或撥出號碼。 鈴聲選擇和鈴聲音量調節 在掛機狀態，長按【MUTE】鍵選擇所喜愛的鈴聲，LCD顯示“RING 01”~“RING 08”，選擇鈴聲後再按【VOL】鍵可3檔調節鈴聲音量及關閉選擇，LCD顯示“RINGVOL 1~RINGVOL 3”，及OFF。 4 摘機操作 來電(去電)查詢 摘機後可用【▲】、【▼】鍵查詢來電或按OUT鍵查詢去電。 免提音量調節 摘機狀態按【VOL】鍵，可2級調整免提音量，LCD顯示VOL1~VOL2。		4 安全提示 特別注意及遵循下列安全的建議。請勿在雷雨天氣下使用電話。 安裝環境 1. 避免區域在供暖設備及會產生噪音的電器附近。(例如，馬路和星光燈) 2. 請勿暴露在高溫及直射或潮濕的環境下。 3. 請勿在雷雨天氣下安裝電話。 4. 請勿使用軟性清潔液清潔。 5. 請勿使用磨蝕性的清潔劑或研磨粉，以避免造成外觀損傷。 注意：為了防止火災或觸電的危險，請勿將本產品暴露在雨中或潮濕環境中。 For sales and service in Asia info@hopsford.com AS7401 IB.Rev.5 合發實業有限公司 Hopsford Industries Limited PRODUCTS - WARRANTY CARD 產品保養證 姓名: _____ Name: _____ 電話: _____ Tel: _____ 型號: _____ Model: _____ 零售商: _____ Dealer: _____ 購買日期: _____ Date of Purchase: _____ 機身編號: _____ Serial No.: _____ 辦公時間: _____ 星期一至五 (公眾假期休息) 上午二時至五時 Office Hours Mon - Fri (Except for Public Holidays) 2:00pm - 5:00pm 維修中心 SERVICE CENTRE 18/F, Wealthy Industrial Building, 22 Wing Yip Street, Kwai Hing, Hong Kong. 新界葵青區葵青街22號永豐大廈18樓1818室 維修中心 Whatsapp: (852) 64816550 / Tel: (852) 21856283 合發實業有限公司 Hopsford Industries Limited CUSTOMER'S COPY 用戶存根, 不需寄回 保養說明 + 保養條款 + 1. 此保養證只適用於於本公司所售之產品及不具轉讓。 2. 此保養證只限於保單期內，請出示保養證，購買正本及全套產品一併交回。客戶須將產品寄回本公司。 3. 保單期內，本公司將負責修理及更換零件，但不包括因意外、火災、電壓及電氣之保養期為購買後90天，包括對電池的蓄電能力最低於額定功率的80%以下及電池洩漏這兩種情況。 4. 此保養證不包括由下列情況所導致的損壞：(a) 產品曾經改變、修改及非由本公司修理過；(b) 正常磨損；(c) 不當安裝、使用、疏忽、意外或疏忽；(d) 接觸水、雨、沙、塵埃、汗液、太過潮濕或接近熱源；(e) 使用其他品牌的配件。 5. 此保養證只在香港有效。 6. 由通知之日起起2個月內沒有領回已維修條件，公司有權自行處理有關條件，逾期失機，恕不負責。 7. 本公司有權隨時修改保養條款，而無須先行通知客戶。 + Warranty Conditions + 1. This warranty commences on the date of original purchase and expires 12 months from that date. 2. This warranty extends only to the first consumer purchaser and is not transferable. 3. Warranty service will only be provided within the warranty period. To obtain service, the complete set of product shall be brought to our service centre at the purchaser's own expense, together with this warranty card and the original purchase invoice. 4. The warranty period for accessories (battery, adaptor, line cord) is 90 days commencing from the date of original purchase. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered. 5. The warranty does not cover defects or damage result from (a) modification, alteration or repair by persons other than the authorized personnel of the company; (b) normal wear and tear; (c) improper installation and operation, misuse, accident, negligence; (d) contact with water, rain, sand, dirt, extreme humidity or heat, heavy perspiration; (e) the use of other brand accessories. 6. The warranty is valid in Hong Kong only. 7. Any repaired items not collected by customers within 2 months from the date of notice will be disposed of at the discretion of the company. 8. The warranty conditions are subject to change by the company without giving prior notice to customer.	
---	--	---	--	--	--	--	--

Uniden MODEL:AS7401 OWNER'S MANUAL  PLEASE READ BEFORE USE		1 Getting Started Welcome Thank you for purchasing a Uniden phone. NOTE: Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit. Features Review • FSK/DTMF - Caller ID • 8 Ringtone Selections • Outgoing CID memory - 16 of 8 digits. • Incoming CID memory - 62 of 8 digits • 8 groups of 16-digits one-touch memory • Flash time 1000ms/600ms/300ms/110ms • Alarm • Speakerphone 2 level • Ringer 3 levels and ON/OFF • Message waiting Lamp • Mute • Caller Blacklist Memory 30 - 12- digits • DND - do not disturb • 5- Digit local area code setting • 2- Digit outside line code setting • New call indicator lamp *Caller ID requires subscription to your local telephone company.		Accessories (included) 1.Base 4.Coi Cord 2.Handset 5.User Manual 3.Line Cord  Location of controls 		LCD display layout  1 18.08.08-08 Date,time 2 IN Incoming call 3 OUT Outgoing call 4 4 NEW REP MAIL VIP、New call,Repeat,Mail 5 0000000000000000 Phone number display 6 SUN MON TUE WED THU FRI SAT Day display 2 Settings Setting – Tips Press [SET/STR] key in the on-hook state to enter the setting state, and the LCD displays "set". Then press the [▲] and [▼] keys to select setting items, and LCD displays the corresponding setting parameters. Press [SET/STR] to get into setting. After completing a certain setting, press the [SET/STR] key to enter into next setting. Use [▲] and [▼] keys to select the specific setting item, and use [DEL] key to exit set status.		2 Settings Set date/time (set 1) On-hook state, press [SET/STR] key and press [▲] and [DOWN] keys to select the setting parameter. LCD prompts "set: date", press [SET/STR] key to confirm. Enter into date/time setting mode. The Year display flashing, press [▲] and [▼] keys to modify it. After completion, press [SET/STR] key to enter into 0 month setting. The setting method is the same as the year setting, and then press the [SET/STR] key to modify the date, hour and minute in minute in sequence. Set alarm (set 4) On-hook state, press [SET/STR] key press the [▲] and [▼] keys to select 4. the LCD displays "SET 4 ALERT", press [SET/STR] key to enter setting, and displays show "00-00 OFF". Set the alarm, hour and minute, press [SET/STR] confirm Display show "ON" state. Set LCD brightness (set 5) Press the [SET/STR] key and then press [▲] and [▼] select 5. The LCD displays "SET 5 LCD", Press [SET/STR] key to enter setting mode. Use [▲] or [▼] key adjust the brightness (from 1 to 5) Set FLASH time (set 6) Press the [SET/STR] key and press the [▲] and [▼] keys 6. The LCD displays "SET 6 R", Press [SET/STR] key to enter setting mode. It displays "R 3 600" and use [▲] or [▼] key to select other flash time, four levels of adjustment: 110ms / 300ms / 600ms / 1000ms. Caller Blacklist Settings (set 8) Turning the blacklist function ON and OFF Press and hold the [DEL] key for 5 seconds to enter into settings. LCD prompts "SET 8 BLOCK". Press the [SET/STR] key to enter into blacklist on and off state. Press the [▲] and [▼] keys to select OFF/ON. Press [SET/STR] key to confirm. Check Blacklist numbers / Delete Press and hold the [DEL] key for 5 seconds to enter the setting, the LCD prompts "SET 8 BLOCK", press the [▲] key and the LCD displays "SET 9 REV", press the [SET/STR] key to enter the blacklist number query, press [▲] or Press the [▼] key to check the blacklist number, and press the [DEL] key to delete the current blacklist number. Add blacklist number Press and hold the [DEL] key for 5 seconds to enter the setting, the LCD prompts "SET 8 BLOCK", press [▼] key. LCD display "SET 8 ADD", press the [SET/STR] key to enter into adding blacklist number, enter the blacklist number and press [SET/STR] to confirm and save. Can set 12 digits and up to 30 memories if memory full - display show FULL. Set Tone/Pulse Dialing Mode (set 7) While the phone is on-hook, press the [SET/STR] key, then use the [▲] or [▼] keys to select the setting. The LCD will display "SET 7 P-T". Press [SET/STR] again to enter the setting. The screen will display "TONE PULSE", where you can set the desired dialing mode. DND On Hook Press "#8#hhmm# set do not disturb time. hh (hours), mm (minutes). DND activated LCD will show hh : mm and start counting the time for DND. Automatic cancel DND when times up. During DND period setting, Phone will not ring, will still record incoming CIDs. Phone from VIP numbers will still ring during DND period. Set local area code (set 2) - 5 digits. On-hook state, press [SET/STR] key and then press [▲] and [▼] key select 2 setting. LCD will display "set 2 code", press [SET/STR] key to confirm, the LCD will display 5 digit. 1st digit flashing to set first. Press [▲] and [▼] keys to set 0 to 9. After completing, press the [SET/STR] key to move to second digit setting, and so on.	
2 Settings Set Outside Line code (Set 3) - 2 digit (PC code) - when using behind office pbx. Press the [SET/STR] key and press [▲] and [DOWN] keys to select 3. LCD will display "Set 3 PC Code". Press [SET/STR] confirm, LCD will display "PCcode --", 1st digit flashes. Press [▲] and [▼] keys to set 0 to 9. After completing, press the [SET/STR] key to move to second digit setting. After setting outside line code, when calling out from an incoming CID calls or from a pre-dialing number, if the number is greater than or equal to 6 digits and if the first digit is different from the outside line code, the phone will automatically add the outside line code in front of the dialing digits.		3 On-hook function CIDs, directly press [DIAL] key or [☎] key or pick up the handset - to call back the caller number; Press the [DIAL] key twice in succession, and the phone will automatically add "00" before the first number. For Long Distance call back. Ongoing CIDs Press [OUT] key to check recently dialed number and call time. If you want to dial the number again, directly press the [DIAL] key or [☎] key or pick up the handset. Up to 32 digits can be stored for outgoing calls. If the number of outgoing calls exceeds 16 digits, manually search and view them sequentially. On-hook pre-dial In the on-hook state, enter the number to be dialed. If input error, use the [DEL] key to modify it. If dialed number is OK, press the [DIAL] key or Speakerphone key or pick up the handset to dial out. Delete CID number / Delete All incoming or outgoing CID list Key [▲] [▼] - get into incoming / outgoing CID list. Pick the number to be deleted. Press [DEL] When scrolling incoming or outgoing CID list. Long press [DEL] key will delete all the CID list.		4 Off-hook functions Incoming CIDs / Outgoing CID inquiry Off-hook, use [▲] and [▼] keys incoming CIDs, and use [OUT] key to check outgoing CIDs. Speakerphone volume setting Press [VOL] key in off hook state, Press speakerphone key to adjust the speakerphone volume (2 level). LCD will prompt settings. Call timing After picking up the phone and dialing the phone automatically enters the call time; and the LCD displays the call time. MUTE function During conversation, press the [MUTE] key, phone goes into MUTE mode, the other party cannot hear you. LCD will display MUTE indicate the phone in mute state. Press [MUTE] key again to cancel MUTE function. In standby mode, press the [MUTE] button to set ringtone volume levels. The LCD will display "RINGVOL 1~RINGVOL 9". Redial/Pause function Pressing [RD/PAUSE] key in the off-hook state before dialing will dial the last outgoing call number. Pressing the [RD/PAUSE] key during dialing or pre-dialing will activate the pause function. VIP number setting When checking incoming CIDs and outgoing CIDs, press [RD/PAUSE] key to set the screen number as a VIP number. Press this [RD/PAUSE] key to cancel the VIP number. VIP numbers will have unique ringtone. (☎) Direct Memory (M1 - M8) To Store On hook, enter number and long press M1 - M8 to store. Dial Out Press M1 - M8, unit will automatically dial out.		5 Safety Instructions Please do not use telephone during thunderstorm. Installations Environment 1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps). 2. Do not expose to direct sunlight or moisture. 3. Do not install the telephone during thunderstorm. 4. Clean the phone with a soft cloth. 5. Never use a strong cleaning agent or abrasive powder because this will damage this unit. WARNING: To prevent fire or shock hazard, do not expose this product to rain or any type of moisture. For sales and service in Asia contact: info.hopsford.com		6 WARRANTY CARD 18.COM Electronics Pte Ltd. WARRANTY CARD Name: _____ Contact No./Tel: _____ Model: _____ Date Of Purchase: _____ Serial No: _____ Dealer's Stamp: _____ Service Centre: Monday-Friday Opening Hours 9:30am - 12:30pm, 2:00pm - 5:00pm Tel: 6278 8274 CUSTOMER'S COPY : DO NOT MAIL THIS 1. This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repairs services. 2. Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges. 3. This Warranty is invalid if the product has been modified, altered and /or repaired by persons other than technician of our company or mishandled by customer. 4. This warranty is applicable to Singapore only. 5. This warranty does not cover damages caused by natural disasters such as flooding and lightning etc. 6. Customers are requested to collect repaired unit within two months from date of submission. Units not collected after 6 months will be disposed off by the company. ----- 18.COM Electronics Pte Ltd, 159 Sin Ming Road, Amtech Building, #04-01, Singapore 575625	