



AT4105


Cordless Phone



User's manual


3. GETTING TO KNOW YOUR PHONE

3.1 Overview of the Handset

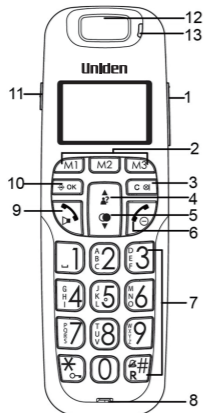

- VOLUME CONTROL
- M1/M2/M3 - DIRECT MEMORY KEYS
- C / INT / MUTE
- ▲ / CALL LOG
- ▼ / REDIAL LIST
- TALK OFF
- ALPHANUMERIC KEYPAD, * (STAR), # (HASH)
- MICROPHONE
- TALK ON / SPEAKERPHONE
- MENU / OK
- AUDIO BOOST
- LED
- EARPIECE


3.2 Base Station Overview

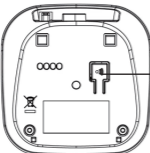

Press the Page on the base station to page your handset. It will ring for approximately 60 seconds.

3.3 Display Icons and Symbols

The screen display gives you information on the current status of the telephone.

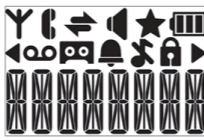

| Display icons | Icons can be Steadily On (visible), Flashing or Off (not visible) |
|---------------|---|
| | Steadily on when the handset is within range of the base. Flashes when the handset is in marginal range of the base. Off when out of range of the base or cannot communicate with the base. |
| | Steadily on when a call is in progress. Flashes when there is an incoming call. Off when handset is on hook. |
| | On when the speakerphone is turned on. Off when speakerphone is off. |
| | Steadily on when the intercom call is connected successfully. Flashes when there is an incoming internal call or internal call being put on hold. Off when the intercom call goes on hook. |
| | On new new call received. Off when no new call. |
| | On when the ringer is switched off. Off when ringer is turned on. |
| | Steadily on when an alarm is set. Flashes when the alarm time set before reaches. Off when alarm is turned off. |
| | On when the keypad is locked. Off when the keypad is unlocked. |
| | On when there is new voice message not yet read. Off when all the voice messages have been read. |
| | On when more digits are existed before the text currently displayed. Off when no digit is existed before the number currently displayed. |
| | On when more digits are existed after the text currently displayed. Off when no digit is existed after the number currently displayed. |
| | Full battery power level. |
| | 2/3 battery power level. |
| | 1/3 battery power level. |
| | Flashes when low battery power level is detected, needs charging. |
| | Animation in cycle, battery is charging. |

3.4 Menu Structure

In idle mode: Press → Press to select. Press to return to previous screen. Long Press to return to idle mode.

| MAIN MENU | CONTACTS | CALL LOG | BS SET | HS SET |
|-----------|--|---------------------------------------|-------------------------------|---|
| SUB MENU | ADD VIEW EDIT DELETE DEL ALL CAPACITY FASTDIAL | STORE DELETE DEL ALL DETAILS CATEGORY | DEL HS DIALMODE FLASH CHG PIN | RINGER TONE EQLIZER SEL BASE LANGUAGE HS NAME DISPLAY AUTO ANS MAIL BOX |
| MEM KEY | CLOCK | ALARM | REGISTER | DEFAULT |
| M1 M2 M3 | DATE FMT TIME FMT SET TIME SET DATE | ON OFF | Pin? | Pin? |

4. USING YOUR PHONE

4.1 Make a Call

4.1.1 Preparatory Dialing

Enter the phone number and press to dial the number. Press to clear the entry.

4.1.2 Direct Dialing

Press to take the line and enter the phone number.

4.1.3 Call from the phonebook

→ **CONTACTS** → ▲ / ▼ to select the desired Call List entry →

4.1.4 Call from the Call List

▲ → ▲ / ▼ to select the desired Call List entry →

4.1.5 Call from the redial list

▼ → ▲ / ▼ to select the desired redial number →

4.1.6 Call timer

Your handset automatically times the duration of every call. The call timer will display a few seconds after the call has made. It is shown in hours, minutes and seconds format (HH:MM:SS).

4.2 Answer an Incoming Call

In idle, press and hold **M1/ M2/M3** to dial the number pre-stored into the keys respectively.

You need to set the direct access number first. Please see section 7.3.11 for details.

- If no number is stored, you will hear double beeps tone.

4.3 Answer a Call

If the handset is not on the charging cradle:

When the phone rings, press to answer a call.

If the handset is on the charging cradle or the base station and if **AUTO ANS** is set to ON:

When the phone rings, pick up the handset to answer a call.

4.4 Audio Boost Feature

The audio boost feature allows you to amplify the handset earpiece volume to compensate for the ear's limited sensitivity.

To turn on the audio boost feature, press **<Auto Boost>** at any time during a call. The handset top indicator turns on. Press again to turn off.

- The audio boost feature will be turned off automatically when the call is ended.

4.5 End a Call

Press -OR- Place the handset on the base.

4.6 Adjust Earpiece and Handsfree Volume

There are 5 levels (**VOLUME 1 to VOLUME 5**) to choose from for each of earpiece and handsfree volume.

During a call: Press **<Volume Control>** to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.

4.7 Mute a Call

You can talk to someone nearby without letting the caller hear you during a call.

During a call:

Press to mute the microphone and "MUTED" will display on the screen. Your caller cannot hear you.

Press again to unmute the microphone.

4.8 Set the Silent Mode

In idle, press and hold *# to turn off the handset ringer. The icon is displayed on the screen. Long press again to turn on the ringer.

4.9 Turn on/off the Keypad Lock

Long Press * * The icon is displayed on the screen. Long Press again to turn off.

4.10 Redial the last number

You can redial up to 5 of the last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

4.10.1 Redial a Number from the Redial List

In idle mode, press ▼ → ▲ / ▼ select the record →

Remarks: If redial entry with name, press # to view the number.

Note: If there are no numbers in the redial list, the display shows "EMPTY".

4.10.2 Store a Redial Number into the Phonebook

In idle mode, press ▼ → ▲ / ▼ select the record → → **STORE** → → enter the name. → → ▲ / ▼ to select RING 1-10. → .

4.10.3 Delete a Redial Number

In idle mode, press ▼ → ▲ / ▼ select the record → → ▲ / ▼ to select DELETE →

4.10.4 Delete the Entire Redial List

In idle mode, press ▼ → → ▲ / ▼ to select DEL ALL → →

4.11 Find the Handset

You can locate the handset by pressing PAGE Button on the base station. All the handsets registered to the base will produce the paging tone and "PAGING" is displayed on the screen. You can stop the paging by pressing / / on any handset or PAGE Button on the base again.

Note: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

4.12 Make an Internal Call (Only for at least 2 registered handsets)

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls.

If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.

Note: If only one handset is registered to the base station, press will display "FAILED".

4.12.1 Intercom Another Handset

1. In idle mode, press and the registered handsets will display except the calling handset.

2. Enter the desired handset number to intercom with.

3. The called handset rings. Press on the called handset to establish the internal call.

Note: If two handsets are registered to the base station, press will connect to another handset immediately.

4.12.2 Call All Handsets (for more than 2 registered handsets only)

1. In idle mode, press and the registered handsets will display.

2. Press <KEY 9> to ring to all registered handsets.

4.12.3 Transfer an External Call to another handset

During an external call:

1. Press and ▲ / ▼ to select **INTERCOM**.

2. Press to select the desired handset to intercom with.

3. The external call is put on hold automatically and the called handset rings.

4. Press on the called handset to establish an internal call.

5. Press on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.

6. The external call is transferred to the called handset.

4.12.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

During an external call:

1. Follow Steps 1 to 4 in section 3.12.3.

2. Press and hold * * on the calling handset to establish the conference call.

Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

5. PHONEBOOK

Your phone can store up to 20 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 8 characters for the name. You can also select different ringtones for your phonebook entries. Phonebook entries are stored alphabetically by name.

5.1 Add a New Phonebook Entry

→ **CONTACTS** → → → **ADD** → → Enter name → → Enter number → → ▲ / ▼ → **RING 1 - RING 10** →

5.2 Search a Phonebook Entry

In idle: → **CONTACTS** → Enter the first character of the name by multi-tap.

5.3 View a Phonebook Entry

→ **CONTACTS** → → ▲ / ▼ to view the entry → → ▲ / ▼ → **VIEW** → → ▲ / ▼ to view name, number and Ringtone.

5.4 Edit a Phonebook Entry

→ **CONTACTS** → → ▲ / ▼ to view the entry → → ▲ / ▼ → **EDIT** → → Edit name → → Edit the number → → **RING 1 - RING 10** →

5.5 Delete a Phonebook Entry

→ **CONTACTS** → → ▲ / ▼ to view the entry → → ▲ / ▼ → **DELETE** →

5.6 Delete the Entire Private Phonebook

→ **CONTACTS** → → → ▲ / ▼ → **DELETE ALL** → →

5.7 Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

→ **CONTACTS** → → → ▲ / ▼ → **CAPACITY** → →

5.8 Set the Fast Dial Numbers

After setting the fast dial numbers, you can dial to the pre-set numbers by pressing and holding the respective digit keys from idle mode.

5.8.1 Add or Edit the Fast Dial Number

→ **CONTACTS** → → → ▲ / ▼ → **FASTDIAL** → → select key 2 - 9 →

A) If there is no number stored in the selected key, EMPTY will show on the screen:

▲ / ▼ to select an entry from the contacts list. →

B) If there is already a number stored in the selected key:

to select EDIT. → ▲ / ▼ to select an entry from the contacts list. →

5.8.1 Delete the Fast Dial Number

→ **CONTACTS** → → → ▲ / ▼ → **FASTDIAL** → → select key 2 - 9 → → ▲ / ▼ → **DELETE** →

6. CALLER DISPLAY

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the call log. The number will be shown on the screen when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "WITHHELD" will display. In standby, if three unanswered calls are received, "3 CALLS" will be displayed.

6.1 View the Call List

All received calls are saved in call log with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a ★ icon.

Press ▲ to access the call list. Or Press → ▲ / ▼ to select **CALL LOG** →

6.2 Store a Call List Number into the Phonebook

Press ▲ → ▲ / ▼ select the record → → **STORE** → → enter the name. → → Edit number if necessary → → ▲ / ▼ to select melody 1-10. →

6.3 Delete an entry in the Call Log

Press ▲ → ▲ / ▼ select the record → → ▲ / ▼ to select **DELETE** →

6.4 Delete the entire list of the Call Log

Press ▲ → → → ▲ / ▼ to select **DELETE ALL** → →

6.5 View the Details of the Call List Entry

Press ▲ → ▲ / ▼ select the record → → ▲ / ▼ to select **DETAILS** →

7. PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.

7.1 Clock Settings

You will need to set the correct time and date so that you know when you received answering machine (applicable to model with answering machine) or call list entries.

7.1.1 Change the Date Format (Optional)

→ ▲ / ▼ → **CLOCK**. → → ▲ / ▼ → **DATE FMT** → → ▲ / ▼ → select your desired date format (DDMMYY or MMDDYY) →

7.1.2 Change the Time Format (Optional)

→ ▲ / ▼ → **CLOCK**. → → ▲ / ▼ → **TIME FMT** → → ▲ / ▼ → select your desired date format (12 HR or 24 HR) →

7.1.3 Set the Time

→ ▲ / ▼ → **CLOCK**. → → ▲ / ▼ → **SET TIME** → → Enter Time →

Note: If time has been set before, the current time will display, otherwise, "HH:MM" will display.

7.1.3 Set the Date

→ ▲ / ▼ → **CLOCK**. → → ▲ / ▼ → **SET DATE** → → Enter Date →

Note: If date has been set before, the current date will display, otherwise, "DDMMYY" will display.

7.2 Alarm Settings

You can use this phone to set an alarm clock. When an alarm is set, the displays on the screen.

When the alarm time is reached, the and "ALARM ON" flash on the screen ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of 7 minutes.

Note:

a) Key press is still applicable if handset keypad is locked and when the alarm time is reached.

b) The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to OFF, the alarm still sounds at VOLUME 1 level.

c) During an external call or internal call, if an alarm is set and when the alarm time is reached, the and "ALARM ON" will still flash. An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key or press and hold , to disable the alarm, it will revert to the call duration screen.

d) During paging or ringing, the alarm will not sound when the alarm time is reached. However, if snooze function is enabled, the alarm will sound again at the end of the snooze period provided that it's not ringing or in paging mode at the end of the snooze period.

7.2.1 Turn on/off the Alarm

→ ▲ / ▼ → **ALARM**. → → ▲ / ▼ → to select **ON/OFF** →

If the Alarm is set to be ON:

Enter the alarm time → → (set the snooze function) → ▲ / ▼ to select **ON/OFF** →

7.3 Handset Settings

7.3.1 Set the Ringer Melody for Internal Calls

→ ▲ / ▼ → **HS SET** → → ▲ / ▼ to select **RINGER** → → ▲ / ▼ to select **INT RING** → → ▲ / ▼ to select ringer 1-10 →

7.3.2 Set the Ringer Melody for External Calls

→ ▲ / ▼ → **HS SET** → → ▲ / ▼ to select **RINGER** → → ▲ / ▼ to select **EXT RING** → → ▲ / ▼ to select ringer 1-10 →

7.3.3 Set the Ringer Volume

→ ▲ / ▼ → **HS SET** → → ▲ / ▼ to select **RINGER** → → ▲ / ▼ to select **EXT RING VOL** → → ▲ / ▼ to select **VOLUME 1-5 or OFF** →

Note: If OFF is selected, icon will display.

7.3.4 Set Alert Tones

A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up your battery.

→ ▲ / ▼ → **HS SET** → → ▲ / ▼ to select **TONE** → → ▲ / ▼ to select **KEY TONE / LOW BATT / OUTRANGE** → → ▲ / ▼ to select **ON/OFF** →

7.3.5 Set the Equalizer

The phone has three different frequency range filters to compensate for the ear's limited sensitivity in these ranges. For more details about the amplify feature, please refer to section 4.4.

→ ▲ / ▼ → **HS SET** → → ▲ / ▼ to select **EQLIZER** → → ▲ / ▼ to select the desired frequency range filter →

7.3.6 Select Base

If you have registered the handset to more than one base, you can select any one of them to use with your handset.

→ ▲ / ▼ → **HS SET** → → ▲ / ▼ to select **SEL BASE** → → ▲ / ▼ to select the desired base →

7.3.7 Set the Handset Language

→ ▲ / ▼ → **HS SET** → → ▲ / ▼ to select **LANGUAGE** → → ▲ / ▼ to select the desired language →

7.3.8 Rename the Handset

→ ▲ / ▼ → **HS SET** → → ▲ / ▼ to select **HS NAME</**



AT4105 室內無線電話

用戶手冊

1. 重要的安全說明


使用電話設備時，應遵循基本的安全預防措施，以減少火災，電擊和傷害的危險，包括：

- 閱讀並理解所有說明。
- 請遵循產品上標記的所有警告和說明。
- 清潔前先從牆壁插座上拔掉電源。請勿使用液體清潔劑或噴霧清潔劑或使用濕布清潔。
- 請在水附近使用本產品（例如，在浴缸，廚房水槽附近）。
- 請勿將電話暴露在直射的陽光下或極寒冷的環境中。請勿將電話靠近散熱器，炊具等熱源。
- 不要使牆壁插座和拖板超過負載，否則可能導致火災或電擊的危險。
- 如遇上以下情況，請從電源插座上拔下本產品的插頭，並諮詢維修人員：
 - 電源線或插頭損壞或磨損時。
 - 如果遵循操作說明，產品無法正常運行。
- 請勿於氣體洩瀉的地點附近使用電話。
- 僅使用隨附的電池！手機的操作時間僅供參考。
- 使用其他類型的電池或不可充電的電池/原電池可能很危險。這些可能會造成乾擾和/或損壞設備。製造商將不對因不遵守規定而造成的損失負責。
- 請勿使用第三方充電槽。否則電池可能損壞。
- 插入電池時，請注意極性必須正確。
 - 在極高或極低溫度環境下使用，儲存或運輸過程。
 - 將電池投入火中或熱烤箱中，或以機械方式破碎或切割電池，可能導致爆炸。
 - 將電池放置在極端高溫的環境中，可能導致爆炸或易燃液體或氣體洩漏。
 - 極高的溫度和/或極低的气壓可能導致爆炸或易燃液體或氣體洩漏。

| 警告 |
|---------------------------|
| 如果電池類型不正確，則有爆炸的危險。 |
| 請按照說明處置用過的電池。 |


2. 安裝電話

2.1 連接電源及電話線

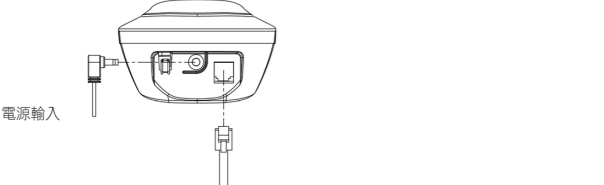

- 注意：
- ⚡🔌：僅使用為底座/充電器提供的電源適配器。
 - “對於可插拔設備，應將插座安裝在設備附近，並且易於訪問的位置”
 - 注意：符合安規暴露的安全要求，底座應安裝和使用在使用者除手以外的身體部位保持20厘米或以上的距離。


2.2 安裝電池並為其充電

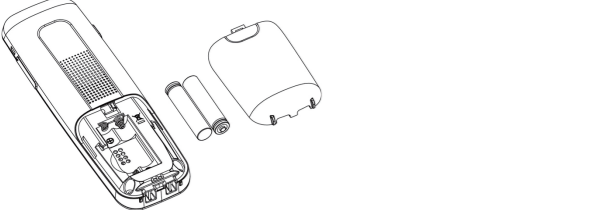

- 滑動打開電池蓋
 - 如圖所示放置兩節電池，請確保極性正確
 - 關上電池蓋
 - 將聽筒放在底座上，第一次充電14小時。發出嗶嗶聲表示聽筒已正確放置在底座或充電器上。
- 注意：
- ⚡🔌：打開電池蓋前請先斷開電話線連接。
 - 僅使用AAA 1.2V 400mAh鎳氫可充電電池為子機的充電。
 - 如果長時間不使用，請斷開連接並取出電池以防止可能的洩漏。

3. 了解您的電話

3.1 手機概述

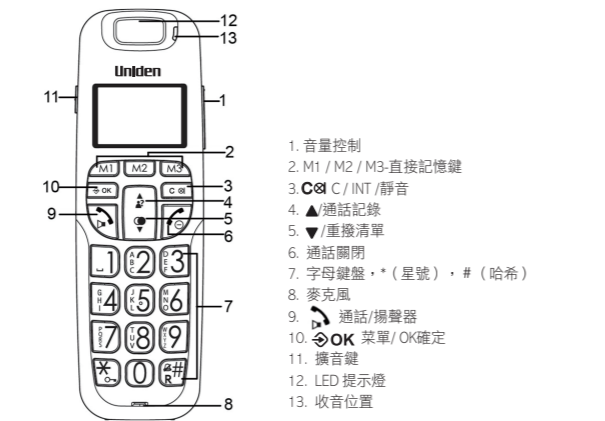

3.2 底座概述



3.3 顯示圖標和符號

屏幕顯示為您提供有關電話當前狀態的信息。



| 顯示圖標 | 圖標可以是持續地亮著（可見），閃爍或關閉（不可見） |
|------------------|--------------------------------|
| ✂ | 當聽筒處於接收範圍內時持續亮著 超出範圍或未註冊到底座時閃爍 |
| 📞 | 接聽電話持續亮著，來電時閃爍，結束通話後關閉。 |
| 🔊 | 揚聲器打開時持續亮著 |
| 📶 | 內線通話成功接通後持續亮著。有內部來電或保持內部來電時閃爍。 |
| ★ | 當您有未接來電時，指示燈會持續亮著 |
| 🔔 | 鈴聲關閉時持續亮著 |
| 🔔 | 已設置鬧鐘時持續亮著，到達鬧鐘時間之前閃爍 |
| 🔒 | 鍵盤鎖定時持續亮著 |
| 🔔 | 若在電話服務提供商處收到消息時持續亮著 |
| 🔔 | 若當前顯示的文字之前存在更多字符合持續亮著 |
| ▶ | 若當前顯示的文字之後存在更多字符合持續亮著 |
| 🔋 | 電池已充滿 |
| 🔋 | 2/3電池電量。 |
| 🔋 | 1/3電池電量。 |
| 🔋 | 電池電量不足時閃爍，需要充電。 |
| 🔋🔋🔋 | 循環播放，電池正在充電。 |

3.4 菜單導航

在閉置模式下：按 **⇨OK** → **▲/▼** → **⇨OK** 選擇。

按 **C** 返回上一目錄。

長按 **C** 返回閉置模式。

| 主菜單 | CONTACTS | CALL LOG | BS SET | HS SET |
|----------|--|---------------------------------------|-------------------------------|--|
| 子菜單 | ADD VIEW EDIT DELETE DEL ALL CAPACITY FASTDIAL | STORE DELETE DEL ALL DETAILS CATEGORY | DEL HS DIALMODE FLASH CHG PIN | RINGER TONE EQILIZER SEL BASE LANGUAGE HS NAME DISPLAY AUTO ANS MAIL BOX |
| MEM KEY | CLOCK | ALARM | REGISTER | DEFAULT |
| M1 M2 M3 | DATE FMT TIME FMT SET TIME SET DATE | ON OFF | Pin? | Pin? |

4. 使用電話

4.1 撥打電話

4.1.1 預撥號

輸入電話號碼，然後按 **☎** 撥打。按 **C** 可清除錯誤輸入

4.1.2 直接撥號

按 **☎**，然後輸入電話號碼

4.1.3 從電話簿撥打電話

⇨OK → **CONTACTS** → **▲/▼** 選擇所需紀錄→ **☎**

4.1.4 從通話清單撥打電話

▲ → **▲/▼** 選擇所需紀錄 → **☎**

4.1.5 從重撥清單呼叫

▼ → **▲/▼** 選擇所需的重撥號碼→ **☎**

4.1.6 通話計時器

您的聽筒將自動為每次通話的持續時間計時。通話完成後，通話計時器將顯示幾分鐘。以小時，分鐘和秒的格式（HH：MM：SS）顯示。

4.2 通過單鍵撥號

在閉置狀態下，按住M1 / M2 / M3分別撥打預存儲在按鍵中的號碼。您需要先設置直接訪問號碼。有關詳細信息，請參見第7.3.1節。
- 如果沒有存儲任何號碼，您會聽到兩次嗶聲。

4.3 接聽電話

如果聽筒不在充電座上：
電話響起時，按 **☎** 接聽電話
手機如在充電座上，以及**AUTO ANS** 設置為**ON**；電話響起時，拿起聽筒即可接聽。

4.4 擴音功能

擴音功能使您可以放大聽筒的音量，以補償耳朵有限的靈敏度。要打開擴音功能，請在通話過程中隨時按聽筒左側的<擴音鍵>。聽筒頂部指示燈會亮起，再按一次即可關閉擴音。通話結束時，擴音功能將自動關閉。

4.5 結束通話

按 **☎** 或將聽筒放回充電座上

4.6 調整聽筒和免提音量

聽筒和免提音量各有5種級別（**VOLUME 1**至**VOLUME 5**）可供選擇。
通話中：
按聽筒右側的<音量控制鍵 >選擇音量1-5，顯示屏會顯示當前設置。當您結束通話時，將保留在最後選擇的級別。

4.7 通話靜音

您可以與附近的人通話，而不會在通話過程中讓呼叫者聽到您的聲音。
通話中：
按 **C** 使麥克風靜音，屏幕上將顯示“**MUTED**”。您的呼叫者聽不到您的聲音。再次按 **C** 取消麥克風靜音。

4.8 關閉來電響鈴

在閉置狀態下，按住“**#**”可關閉響鈴。 **🔔** 圖標顯示在屏幕上。再次長按可重新響鈴。

4.9 打開/關閉鍵盤鎖

長按“*****”打開鍵盤鎖，“**🔒**”圖標顯示在屏幕上。再次長按關閉。

4.10 重撥號碼

您最多可以重撥最後撥打的5個號碼。如果您已在電話簿中存儲了姓名和號碼，則將顯示該姓名。最近撥打的號碼將顯示在重撥列表的頂部。

- 4.10.1 重撥重撥列表中的號碼
在閉置模式下，按 **▼** → **▲/▼** 選擇記錄→ **☎**
備註：如果輸入重撥名稱，請按 ***** 查看號碼。
注意：如果重撥列表中沒有紀錄，顯示屏將顯示“**EMPTY**”。

4.10.2 將重撥號碼存儲到電話簿中
在閉置模式下，按 **▼** → **▲/▼** 選擇記錄→ **⇨OK** → **STORE** → **⇨OK** →輸入名稱→ **⇨OK** → **▲/▼** 選擇**RING 1-10** → **⇨OK** 。

4.10.3 刪除重撥號碼
在閉置模式下，按 **▼** → **▲/▼** 選擇記錄→ **⇨OK** → **▲/▼** 選擇**DELETE**→ **⇨OK**

4.10.4 刪除整個重撥列表
在閉置模式下，按 **▼** → **⇨OK** → **▲/▼** 選擇**DEL ALL** → **⇨OK** → **⇨OK**

4.11 尋找手機

您可以在主機座上**PAGE**按鈕 **📶** 尋找手機。所有已註冊的子機都會發出尋呼聲，屏幕上顯示“**PAGING**”。您可以在主機座上再按**PAGE**按鈕 **📶** 或在任何聽筒上按 **☎** / **🔔** / **C** 停止尋呼。

注意：如果在尋呼過程中有來電，則電話會隨著來電而不是尋呼而響鈴。

4.12 內部通話（僅適用於至少2部已註冊的子機）

此功能僅在至少有兩個已註冊的子機時才適用。它允許您進行內部撥號，或將外部來電從一個子機轉移到另一子機以及進行電話會議。如果被呼叫子機在60秒內未應答，則被呼叫子機會停止振鈴，而發出內部撥號的子機將返回閉置模式。

4.12.1 撥打內部子機
在閉置模式下按 **C**，屏幕將顯示已註冊的子機（正使用的子機除外）→ 選擇希望進行內部通話的子機號碼→被呼叫子機響鈴，按 **☎**接聽
注意：

如果只有一個子機註冊到主機座，按 **C** 將顯示“**FAILED**”
如果只有兩部子機已註冊，按 **C** 將立即呼叫另一部子機

4.12.2 呼叫所有手機（僅適用於2部以上註冊的手機）
閉置模式下，按 **C** 將顯示已註冊的子機→按<數字鍵 9>將響至所有已註冊的子機

4.12.3 將外部呼叫轉移到另一個子機
在外部通話中：
按 **⇨OK** → **▲/▼** 選擇所需轉移的子機→ **⇨OK** →外部呼叫會自動保留，被叫子機會響鈴→在被叫子機按 **☎** 建立內部呼叫→發出呼叫的子機上按 **☎**，或放回充電座上以結束與外部用戶的當前通話→外部呼叫被轉接到被叫子機

4.12.4 進行三方電話會議
按 **⇨OK** → **▲/▼** 選擇所需轉移的子機→ **⇨OK** →外部呼叫會自動保留，被叫子機會響鈴→在被叫子機按 **☎** 建立內部呼叫→發出呼叫的子機按下並按住不動 ***** 鍵 建立電話會議。電話會議期間任何子機結束通話，另一子機仍會保持與外部呼叫的連接

5. 電話簿

您的電話最多可以存儲20個帶有名稱和號碼的電話簿紀錄。每個電話簿紀錄最多可以包含20個數字的電話號碼和8個字符的名稱。您也可以為電話簿紀錄選擇不同的鈴聲。電話簿紀錄按名稱的字母順序排列。

5.1 添加新的電話簿紀錄

⇨OK →**CONTACTS** → **⇨OK** → **⇨OK** → **ADD** → **⇨OK** →輸入名稱→ **⇨OK** →輸入號碼 → **⇨OK** → **▲/▼** → **RING 1 - RING 10** → **⇨OK**

5.2 搜索電話簿紀錄

⇨OK →**CONTACTS** →輸入名稱的第一個字符。

5.3 查看電話簿紀錄

⇨OK →**CONTACTS** → **⇨OK** → **▲/▼** 查看紀錄 → **⇨OK** → **▲/▼** → **VIEW** → **⇨OK** → **▲/▼** 查看姓名，號碼和鈴聲

5.4 編輯電話簿紀錄

⇨OK → **CONTACTS** → **⇨OK** → **▲/▼** 查看紀錄 → **⇨OK** → **▲/▼** → **EDIT** → **⇨OK** →編輯名稱 → **⇨OK** →編輯號碼 → **⇨OK** →**RING 1 - RING 10** → **⇨OK**

5.5 刪除電話簿紀錄

⇨OK →**CONTACTS** → **⇨OK** → **▲/▼** 查看紀錄 → **⇨OK** → **▲/▼** → **DELETE** → **⇨OK**

5.6 刪除所有紀錄

⇨OK →**CONTACTS** → **⇨OK** → **⇨OK** → **▲/▼** → **DELETE ALL** → **⇨OK** → **⇨OK**

5.7 檢查電話簿使用情況

您可以檢查電話中已經佔用了多少電話簿條目，以及有多少電話簿條目可用於存儲在電話簿中。
⇨OK →**CONTACTS** → **⇨OK** → **⇨OK** → **▲/▼** → **CAPACITY** → **⇨OK** → **⇨OK**

5.8 設置快速撥號號碼

設置快速撥號號碼後，您可以在閉置模式下按下相應的數字鍵以撥打到預設號碼。

5.8.1 添加或編輯快速撥號號碼

⇨OK →**CONTACTS** → **⇨OK** → **⇨OK** → **▲/▼** → **FASTDIAL** → **⇨OK** →選擇2-9 →

A) 如果所選鍵中沒有存儲信息，則**EMPTY**將顯示在屏幕上：

▲/▼ 從聯繫人列表中選擇一個紀錄→ **⇨OK**

B) 如果所選鍵中已經存儲了一個數字：

⇨OK 選擇**EDIT**→ **▲/▼** 從聯繫人列表中選擇一個條目→ **⇨OK**

5.8.1 刪除快速撥號號碼

⇨OK →**CONTACTS** → **⇨OK** → **⇨OK** → **▲/▼** → **FASTDIAL** → **⇨OK** →選擇2-9 → **⇨OK** → **▲/▼** → **DELETE** → **⇨OK**

6. 來電顯示（必須先向電話商訂閱此服務）

您的電話最多可以在通話記錄中存儲10條帶有日期/時間信息的已接來電。手機響鈴時，該號碼將顯示在屏幕上。如果該號碼與您的私人電話簿中的條目之一匹配，則存儲在電話簿中的呼叫者姓名將顯示。聽筒將響起該電話簿紀錄設定的鈴聲。
如果呼叫者號碼無法發送呼叫者信息，則會顯示“**WITHHELD**”。在待機狀態下，如果收到三個未接電話，將顯示“**3 CALLS**”。

6.1 查看通話清單

所有接聽的電話都保存在通話記錄中，最新的電話會顯示在列表的頂部。當呼叫列表已滿時，最早的記錄將被新紀錄代替。若有未讀的未接電話，顯示屏會出現 **★** 圖標提示。
按 **▲** 訪問通話清單。或按 **⇨OK** → **▲/▼** 選擇 **CALL LOG** → **⇨OK**

6.2 將通話清單號碼存儲到電話簿中
▲ → **▲/▼** 選擇記錄 → **⇨OK** → **STORE** → **⇨OK** →輸入名稱 → **⇨OK** →如有必要，請編輯號碼 → **⇨OK** → **▲/▼** 選擇melody 1-10. → **⇨OK**

6.3 刪除其中一個通話記錄

按 **▲** → **▲/▼** 選擇記錄→ **⇨OK** → **▲/▼** 選擇 **DELETE** → **⇨OK**

6.4 刪除所有通話記錄

按 **▲** → **⇨OK** → **▲/▼** 選擇 **DELETE ALL** → **⇨OK** → **⇨OK**

6.5 View the Details of the Call List Entry

按 **▲** → **▲/▼** 選擇記錄→ **⇨OK** → **▲/▼** 選擇 **DETAILS** → **⇨OK**

7. 手機設置

您的手機帶有一系列可供選擇的設置，您可以更改這些設置以個性化您喜歡的工作方式。

7.1 日期及時間設定

您將需要設置正確的時間和日期，以便知道何時收到來電/未接來電。

7.1.1 設置日期格式

⇨OK → **▲/▼** → **CLOCK**. → **⇨OK** → **▲/▼** → **DATE FMT** → **⇨OK** → **▲/▼** → 選擇所需的日期格式 (**DDMMYY** 或 **MMDDYY**) → **⇨OK**

7.1.2 更改時間格式（可選）

⇨OK → **▲/▼** → **CLOCK**. → **⇨OK** → **▲/▼** → **TIME FMT** → **⇨OK** → **▲/▼** → 選擇所需的日期格式 (**12 HR** 或 **24 HR**) → **⇨OK**

7.1.3 設置時間

⇨OK → **▲/▼** → **CLOCK**. → **⇨OK** → **▲/▼** → **SET TIME** → **⇨OK** →輸入時間 → **⇨OK**
注意：如果之前已設置時間，則將顯示當前時間，否則將顯示“**HH：MM**”。

7.1.3 設置日期

⇨OK → **▲/▼** → **CLOCK**. → **⇨OK** → **▲/▼** → **SET DATE** → **⇨OK** →輸入日期 → **⇨OK**

注意：如果已設置日期，則將顯示當前日期，否則將顯示“**DDMMYY**”。

7.2 鬧鐘設定

您可以使用此手機設置鬧鐘。設置鬧鐘後，**🔔** 會在屏幕上顯示。當達到警報時間時，**🔔** 圖示將閃爍並響鈴45秒。您可以按任意鍵停止響鈴。如果啟用了SNOOZE功能，則在7分鐘的貪睡時間結束時，鬧鐘將再次響起。

- 注意：
- A) 如果手機鍵盤已鎖定並且達到了鬧鐘時間，按鍵仍可適用。
 - B) 關於音量級別與聽筒鈴聲音量的設置相同。如果子機鈴聲設置為OFF，則鈴聲仍會以 VOLUME 1 音量響起。
 - C) 若通話時，設置鬧鈴並且達到了鬧鈴時間，則 **🔔** 仍然閃爍。聽筒響鈴，以通知用戶到達鬧鐘時間。一旦用戶按下任意鍵或按住 **☎** 停止鬧鐘，它將返回到通話時間屏幕。
 - D) 在尋呼或來電過程中，到達警報時間時鬧鐘不會響起。但是，如果啟用了貪睡功能，則在貪睡時段結束時未響鈴或處於尋呼模式的鬧鈴將在貪睡時段結束時再次響起。

7.2.1 打開/關閉鬧鐘

⇨OK → **▲/▼** → **ALARM**. → **⇨OK** → **▲/▼** → 選擇**ON/OFF** → **⇨OK**

如果鬧鐘設置為ON：

輸入鬧鐘時間 → **⇨OK** → **⇨OK** (設置貪睡功能) → **▲/▼** 選擇**ON/OFF** → **⇨OK**

7.3 手機設定

7.3.1 設置內部通話的鈴聲鈴聲

⇨OK → **▲/▼** → **HS SET** → **⇨OK** → **▲/▼** 選擇 **RINGER** → **⇨OK** → **▲/▼** 選擇 **INT RING** → **⇨OK**← **▲/▼** 選擇ringer 1-10 → **⇨OK**

7.3.2 設置外部呼叫的鈴聲鈴聲。

⇨OK → **▲/▼** → **HS SET** → **⇨OK** → **▲/▼** 選擇 **RINGER** → **⇨OK** → **▲/▼** 選擇 **EXT RING** → **⇨OK** → **▲/▼** 選擇ringer 1-10 → **⇨OK**

7.3.3 設置鈴聲音量

⇨OK → **▲/▼** → **HS SET** → **⇨OK** → **▲/▼** 選擇 **RINGER** → **⇨OK** → **▲/▼** 選擇 **RING VOL** → **⇨OK**→ **▲/▼** 選擇**VOLUME 1-5** 或 **OFF** → **⇨OK**

注意：如果選擇“**OFF**”， **🔔** 圖標將顯示。

7.3.4 設置提示音

KEY TONE：當您按鍵時會發出一聲嗶嗶聲。您可以打開或關閉按鍵音
LOW BATT：當您使用子機通話時，亦可以設定低電量提示，提醒您需要給電池充電
OUTRANGE：當聽筒距離底座超出範圍時，亦可設定發出超出範圍的警報聲
⇨OK → **▲/▼** → **HS SET** → **⇨OK** → **▲/▼** 選擇 **PHONE** → **⇨OK** → **▲/▼** 選擇 **KEY TONE / LOW BATT / OUTRANGE** → **⇨OK** → **▲/▼** 選擇 **ON/OFF** → **⇨OK**