AS7408说明书 中文版

折叠式，89x127.5mm,英文封面朝外，12页

背面

1 入門指南

歡迎

非常感謝您選購Uniden產品。

備注: 此說明書中插圖僅供示意,與實物可能有差異。


功能描述

- FSK/DTMF双制式来电显示
- 8首铃声选择
- 去电：最多16组8位，进行动态存储，最长可存储32位
- 来电：最多62组8位
- 3组16位单键记忆
- FLASH时间1000ms/600ms/300ms/110ms可选
- 闹钟功能
- 2档免提音量调节
- 3档铃声音量调节及铃声关功能
- HOLD 保留功能
- 信息留言灯指示
- 静音功能
- 30组12位号码黑名单功能
- DND免打扰功能
- 5 位区域码设置
- 2位出局码设置

*來電顯示功能取決于您當地的電訊服務商。

配件清單(包含)

1. 底座
2. 手柄
3. 電話直線
4. 曲線
5. 說明書



備注：如發現配件缺失，請聯繫當地購買商。

控制器位置



LCD 顯示



1	18.38.88:88	日期、時間
2	IN	來電
3	OUT	去電
4	NEW REP MAIL	VIP、新來电、重复、邮件
5	88888888888888	號碼顯示
6	SUN MON TUE WED THU FRI SAT	日期

2 設置操作

挂机状态下按【FL/SET】键，进入设置状态，LCD 显示 SEt : dAtE，此时，按【UP】、【DOWN】键可改变设置项，LCD同时显示对应的设置项。再按【FL/SET】键进入该项设置。在某项设置完成后，按【FL/SET】键进入下一项设置。所有设置均用【UP】、【DOWN】键修改该具体设置项，用【DEL】键退出设置状态。

设置日期/时间

挂机状态下按【FL/SET】键再按【UP】、【DOWN】键选择设置项，LCD提示“ SEt : dAtE ”，按【FL/SET】键确认。进入日期/时间

2 設置操作

設置，年份显示闪烁後，此时直接可按[UP]、[DOWN]键修改，完成后再按【FL/SET】键进入月份的设置，修改方法与年份的设置相同，再按【FL/SET】键可依次修改日期、小时和分钟。

设置闹钟

挂机状态下按【FL/SET】键再按【UP】、【DOWN】键选择置项，LCD显示“ SET 4 ALERT ”，按【FL/SET】键进入，显示“ 00-00 OFF ”，4位设置响铃、时、分，再按右边闹钟开关，显示“ ON ”为开启状态。

设置LCD亮度

挂机状态下按【FL/SET】键再按【UP】、【DOWN】键选择置项，LCD显示“ SET 5 LCD ”，按【FL/SET】键进入，显示“ LCD 3 ”，可使用【UP】或【DOWN】键进行亮度调节，LCD 显示 LCD1~ LCD5。

设置FLASH时间

挂机状态下按【FL/SET】键再按【UP】、【DOWN】键选择置项，LCD显示“ SET 6 R ”，按【FL/SET】键进入，显示“ R 3 600 ”，可使用【UP】或【DOWN】键选择其他闪断时间，LCD 显示：110ms/300ms/600ms/1000ms。

黑名单号码查询

1. 黑名单功能打开和关闭：
长按【DEL】字键5秒进入设置，LCD提示“ SET 8 BLOCK ”，按【FL/SET】键进入黑名单打开和关闭状态，按【UP】、【DOWN】键进行选择OFF/ON，选择后按【FL/SET】键确认。
2. 黑名单号码查询
长按【DEL】字键5秒进入设置，LCD提示“ SET 8 BLOCK ”，按【UP】键LCD显示“ SET 9 REV ”，按【FL/SET】键进入黑名单号码查询，按【UP】或【DOWN】键翻查黑名单号码，可按【DEL】键删除当前黑名单号码。
3. 增加黑名单号码
长按【DEL】字键5秒进入设置，LCD提示“ SET 8 BLOCK ”，按【DOWN】键LCD显示“ SET 0 ADD ”，按【FL/SET】键进入黑名单号码添加，输入黑名单号码确认无错后按【FL/SET】确认保存，最长可设置12位号码，最多30组。如存储已满提示FULL。
*如黑名单号码来电时，LCD显示00-00，此时已阻隔了黑名单号码来电。

* DND 免打扰时间设定：

挂机状态下按 ：*#8*hhmm# 设定免打扰时间 , hh 是小时，mm 是分钟，按数字键输入。免打扰功能启动后，LCD会显示免打扰时间并倒计时到00—00 后自动取消免打扰，提机或免提也可退出。免打扰期间来电不振铃（除VIP号码外）。

拨号方式 TONE/PULSE

挂机状态下按【FL/SET】键再按【UP】、【DOWN】键选择置项，LCD显示“ SET 7 P-T ”，按【FL/SET】键进入设置状态，此时LCD显示“ TONE ”，表示当前拨号方式为音频拨号。按【UP】、【DOWN】键进行选择，按【FL/SET】键确认。

设置5位区域码

挂机状态下按【FL/SET】键再按【UP】、【DOWN】键选择置项，LCD显示“ SEt 2 CODE ”，按【FL/SET】键确认，LCD会显示“ CODE -- ”，进入区号的设置，第一个“ - ”闪烁（若已设置了区号，则显示设置的区号，区号第一个号码闪烁）。按【UP】、【DOWN】键可设置或修改为 0 到 9，完成第一位设置后，按【FL/SET】键进入第二位设置，以此类推。

设置出局码

挂机状态下按【FL/SET】键再按【UP】、【DOWN】键选择置项，LCD显示“ SEt 3 PCODE ”，按【FL/SET】键确认，LCD会显示“ PCODE -- ”，进入出局码的设置。“ - ”闪烁（若已设置了出局码，则显示已设出局码）。按【UP】、【DOWN】可设置或修改为 0~9，完成后按【FL/SET】键确认并进入下一项设置。
设置了出局码后，在回拨来电、预拨号时，（若号码大于等于 6 位且首位与出局码不同，话机会自动添加出局码。）

3 掛機操作

来电接收

当来电时，话机自动显示来电号码，日期及时间，并记录这是第几个来电，LCD同时显示来电序号。因此，若是新号码，会有 “ NEW ”标志同时出现。若是已有号码， 则会有“ REP ”标志出现。若是来电保密， 则 LCD 会显示“ ----P--- ”。若来电出范围， 则显示“ ----O---- ”。若是来电信号不正确则显示“ ----E---- ”。
收到新来电后话机会保持显示新来电号码及来电时间，直到接听或有按键。

来电查询和回拨

如果来电号码超过16位，则存储后16位。
按【UP】键进入来电查询状态，按【UP】、【DOWN】键可向上/向下翻查，LCD 显示来电的号码、日期及时间等信息。查询到来电后，直接按【BACK】键或按【 】键或摘听筒， 可对来电号码进行回拨；连续按两次【BACK】键，话机会在首位号码前自动加“ 0 ”进行 长途回拨。

去电查询

按【OUT】键可查询最近拨出的号码和通话时间。若打算对所查到的号码再拨号， 直接按【BACK】键或按【 】键或摘听筒。
去电最多可存32位，若去电超过16位时，手动翻查进行顺序查看。

挂机预拨号

在挂机状态下，通过各数字键输入要拨出号码。若有输入错误， 可以用【DEL】键修改， 全部输入完成以后，按【BACK】键或按【 】键或摘听筒拨出。

删除

在挂机设置状态，按【DEL】键用来退出设置；在预拨号状态，按【DEL】键用来删除错误输入的号码；按【UP】【DOWN】键查询来电号码及【OUT】键拨出号码时按【DEL】键用来删除此信息，长按【DEL】键3秒可删除所有来电或拨出号码。

3 掛機操作

铃声选择和铃声音量调节

在挂机状态，连续按【MUTE】键选择所喜爱的铃声，LCD显示“ RING 01 ”～“ RING 08 ”，选择铃声后再按【VOL】键可3档调节铃声音量及关闭选择，LCD显示“ RINGVOL 1 ~ RINGVOL 3 ”，及OFF。

4 摘機操作

来电(去电)查询

摘机后可用【UP】、【DOWN】键查询来电或按OUT键查询去电。

音乐保留

当通话时，按【HOLD】键进入音乐保留状态，此时可放听筒，对方只听到音乐声音，免提会保持音乐响起，如果再摘机时音乐停止。
注：有并机摘机，不会停止音乐保留。

免提音量调节

摘机状态按【VOL】键，可2级调整免提音量，LCD显示VOL1～VOL2。

通话计时

摘机拨号以后，话机自动进入通话计时，LCD显示通话时间。

MUTE功能

在听筒或免提正常通话状态下，按【MUTE】键时发送音被禁止发送，对方听不到您说话，同时屏幕显示MUTE提示话机在静音状态。再按一次【MUTE】键则取消MUTE功能。

重拨/暂停功能：

在摘机状态没有拨号前按【REDIAL】键则拨出最后一组去电号码，在拨号或预拨号过程中按【REDIAL】键则为暂停功能。

设定 VIP 号码

在查询来电、去电号码时按【REDIAL】键则将屏幕号码设为VIP号码，再按此键可以取消VIP号，设置VIP号码来电时响VIP铃声，和非VIP号来电铃声有区分，设定 VIP 号码后显示屏显示（🔒）符号。

单键记忆

存储：挂机＋号码＋长按(M1~M3)
拨号：摘机＋(M1~M3)或挂机＋(M1~M3)（显示号码）
可以直接拨出号码

5 故障排除

無撥號音

- 檢查收線制是否正常彈出。
- 檢查電話線的兩端是否已插妥或有否損壞。
- 嘗試將電話線插到其他電話線盒，如果情況沒有改善，問題可能是在於您的電話線路或電訊固網供應商的服務。
- 嘗試用其他電話線。

無來電響鈴或音量大小

- 檢查調節音量設置。

無來電顯示

- 確保您已向該地電信服務商申請了該項服務。

6 安全提示

特別注意及遵循下列安全的建議。請勿在雷雨天氣下使用電話。

安裝環境

1. 避免擺放在供暖設備及會產生噪音的電器附近。（例如，馬達和螢光燈）
2. 請勿暴露在陽光直射或潮濕的環境下。
3. 請勿在雷雨天氣下安裝電話。
4. 請用軟體布清潔電話機。
5. 請勿使用腐蝕性的清潔劑或研磨粉，以避免造成外殼損傷。

注意：為了防止火災或觸電的危險，請勿將本產品暴露在雨中或潮濕環境中。

For sales and service in Asia
info@hopsford.com
AS7408 IB.Rev.3

hopsford industries 合發實業有限公司
Hopsford Industries Limited

PRODUCTS - WARRANTY CARD
產品保養證

姓 名 Name: _____
電 話 Tel: _____
型 號 Model: _____
零售商 Dealer: _____
購買日期 Date of Purchase: _____
機身編號 Serial No.: _____

辦工時間
星期一至五（公眾假期休息）
下午二時至五時
Office Hours
Mon - Fri (Except for Public Holidays)
2:00pm - 5:00pm

維修中心 SERVICE CENTRE
18/F, Wealthy Industrial Building, 22 Wing Yip Street, Kwai Hing, Hong Kong.
葵興永業街22号永豐工業大厦18樓
維修中心Whatsapp: (852) 64816550 / Tel: (852) 21856283

此保養證只適用于香港
For Hong Kong Only

保養說明

CUSTOMER'S COPY 用户存根/不需寄回

保養條款

1. 此保養證有效期為購買當日起計12個月。
2. 此保養證只適用於原本購買產品之顧客及不可轉讓。
3. 保養服務只限於保養期內，請出示保養證，發票正本及全套產品一併交回。客戶須負責將產品送往本公司的費用。
4. 零件及配件（火牛、電源線及電芯）之保養期為購買後90天，包括對電池的蓄電能量低於額定功率的80%以下及電池洩漏這兩種情況。
5. 保養證將不包括由下列情況所導致的損壞：(a)產品曾經改變，修改及非由本公司修理過；(b)正常磨損；(c)不當裝配、使用、誤用、意外或疏忽；(d)接觸水、雨、沙、塵埃、汗水，太過潮濕或接近熱源；(e)使用其他品牌的配件。
6. 此保養證只在香港有效。
7. 由通知之日期起2個月內沒有領回已維修機件，公司有權自行處理有關機件，逾期失機，恕不負責。
8. 本公司有權隨時修訂保養條款，而無須先行通知客戶。

Warranty Conditions

1. This warranty commences on the date of original purchase and expires 12 months from that date.
2. This warranty extends only to the first consumer purchaser and is not transferable.
3. Warranty service will only be provided within the warranty period. To obtain service, the complete set of product shall be brought to our service centre at the purchaser's own expense, together with this warranty card and the original purchase invoice.
4. The warranty period for accessories (battery, adaptor, line cord) is 90 days commencing from the date of original purchase. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered.
5. The warranty does not cover defects or damage result from (a) modification, alternation or repair by persons other than the authorized personnel of the company; (b) normal wear and tear; (c) improper installation and operation, misuse, accident, negligence; (d) contact with water, rain, sand, dirt; extreme humidity or heat, heavy perspiration; (e) the use of other brand accessories.
6. The warranty is valid in Hong Kong only.
7. Any repaired items not collected by customers within 2 months from the date of notice will be disposed of at the discretion of the company.
8. The warranty conditions are subject to change by the company without giving prior notice to customer.

AS7408说明书 英文版

正面

Uniden

MODEL:AS7408
OWNER'S MANUAL



PLEASE READ BEFORE USE

1 Getting Started

Welcome

Thank you for purchasing a Uniden phone.

NOTE : Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit .


Features Review

- FSK/DTMF - Caller ID
- 8 Ringtone Selections
- Outgoing CID memory - 16 of 8 digits,
- Incoming CID memory - 62 of 8 digits
- 3 Direct Memory
- Flash time 1000ms/600ms/300ms/110ms
- Alarm
- Speakerphone 2 level
- Ringer 3 levels and ON/OFF
- Hold
- Message waiting Lamp
- Mute
- Caller Blacklist Memory 30 - 12- digits
- DND – do not disturb
- 5- Digit local area code setting
- 2- Digit outside line code setting

*Caller ID requires subscription to your local telephone company.

Accessories (included)


1.Base 2.Handset 3.Line Cord
4.Coil Cord 5.User Manual



Location of controls



LCD display layout

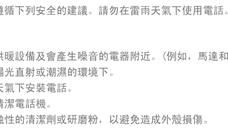

1	18.38.88:88	Date,time
2	IN	Incoming call
3	OUT	Outgoing call
4	NEW REP MAIL	VIP ,New call,Repeat,Mail
5	88888888888888	Phone number display
6	SUN MON TUE WED THU FRI SAT	Day display

2 Settings

Setting – Tips

Press [FL/SET] key in the on-hook state to enter the setting state, and the LCD displays "set ".
Then press the [UP] and [DOWN] keys to select setting items, and LCD displays the corresponding setting parameters. Press [FL/SET] to get into setting. After completing a certain setting, press the [FL/SET] key to enter into next setting. Use [UP] and [DOWN] keys to select the specific setting item, and use [DEL] key to exit set status.

2 Settings

Set date/time (set 1)

On-hook state, press [FL/SET] key and press [UP] and [DOWN] keys to select the setting parameter. LCD prompts " set : date ", press [FL/SET] key to confirm. Enter into date/time setting mode. The Year display flashing, press [UP] and [DOWN] keys to modify it. After completion, press [FL/SET] key to enter into 0 month setting. The setting method is the same as the year setting, and then press the [FL/SET] key to modify the date, hour and minute in sequence.

Set alarm (set 4)

On-hook state, press [FL/SET] key press the [UP] and [DOWN] keys to select 4. the LCD displays "SET 4 ALERT", press [FL/SET] key to enter setting , and displays show "00-00 OFF". Set the alarm, hour and minute, press [FL/SET] confirm Display show "ON" state.

Set LCD brightness (set 5)

Press the [FL/SET] key and then press [UP] and [DOWN] select 5. The LCD displays "SET 5 LCD". Press [FL/SET] to enter setting mode. Use [UP] or [DOWN] key adjust the brightness (from 1 to 5)

Set FLASH time (set 6)

Press the [FL/SET] key and press the [UP] and [DOWN] keys 6. The LCD displays "SET 6 R". Press [FL/SET] key to enter setting mode.
It displays "R 3 600" and use [UP] or [DOWN] key to select other flash time, four levels of adjustment: 110ms / 300ms / 600ms / 1000ms.

Caller Blacklist Settings (set 8)

Turning the blacklist function ON and OFF
Press and hold the [DEL] key for 5 seconds to enter into settings. LCD prompts "SET 8 BLOCK". Press the [FL/SET] key to enter into blacklist on and off state. Press the [UP] and [DOWN] keys to select OFF/ON. Press [FL/SET] key to confirm.

Check Blacklist numbers / Delete

Press and hold the [DEL] key for 5 seconds to enter the setting, the LCD prompts "SET 8 BLOCK", press the [UP] key and the LCD displays "SET 9 REV", press the [FL/SET] key to enter the blacklist number query, press [UP] Or press the [DOWN] key to check the blacklist number, and press the [DEL] key to delete the current blacklist number.

Add blacklist number

Press and hold the [DEL] key for 5 seconds to enter the setting, the LCD prompts "SET 8 BLOCK", press [DOWN] key.
LCD display "SET 0 ADD", press the [FL/SET] key to enter into adding blacklist number, enter the blacklist number and press [FL/SET] to confirm and save. Can set 12 digits and up to 30 memorys if memory full – display show FULL.

DND

On Hook Press *#8*hhmm# set do not disturb time. hh (hours) , mm (minutes).
DND activated LCD will show hh : min and start counting the time for DND.
Automatic cancel DND when times up.
During DND period setting. Phone will not ring, will still record incoming CIDs.
Phone from VIP numbers will still ring during DND period.

Dial Mode - TONE/PULSE - (set 7)

On-hook state, press the [FL/SET] key and then press the [UP] and [DOWN] keys to select. The LCD displays "SET 7 P-T". Press the [FL/SET] key to enter the setting state. Press [UP] or [DOWN] to select, Press [FL/SET] to confirm .

Set local area code (set 2) - 5 digits.

On-hook state, press [FL/SET] key and then press [UP] and [DOWN] key select 2 setting, LCD will display "set 2 code ", press [FL/SET] key to confirm, the LCD will display 5 digit, 1st digit flashing to set first. Press [UP] and [DOWN] keys to set 0 to 9. After completing, press the [FL/SET] key to move to second digit setting, and so on.

2 Settings

Set Outside Line code (Set 3) - 2 digit (PC code) - when using behind office pabx.

Press the [FL/SET] key and press [UP] and [DOWN] keys to select 3. LCD will display "Set 3 PC Code".
Press [FL/SET] confirm,
LCD will display "PCcode --", 1st digit flashes. Press [UP] and [DOWN] keys to set 0 to 9. After completing, press the [FL/SET] key to move to second digit setting.
After setting outside line code, when calling out from an incoming CID calls or from a pre-dialing number, if the number is greater than or equal to 6 digits and if the first digit is different from the outside line code, the phone will automatically add the outside line code in front of the dialing digits.

3 On-hook function

Incoming CID calls

Display will display caller number, date and time and the number of calls.
NEW – new calls
REP – repeated number
P – private
0 - Out of Range
E - Error
New calls, the phone will keep displaying the new call number and call time until answered or viewed.

Incoming call CIDs and callbacks

If the caller number exceeds 16 digits, the last 16 digits are stored.
Press [UP] key to enter into incoming CID list. Press [UP] and [DOWN] to scroll up/down. The LCD displays the CID list. After checking incoming CIDs, directly press [BACK] key or [] key or pick up the handset - to call back the caller number;
Press the [BACK] key twice in succession, and the phone will automatically add "0" before the first number. For Long Distance call back .

3 On-hook function

Ougoing CIDs

Press [OUT] key to check recently dialed number and call time. If you want to dial the number again, directly press the [BACK] key or [] key or pick up the handset. Up to 32 digits can be stored for outgoing calls. If the number of outgoing calls exceeds 16 digits, manually search and view them sequentially.

On-hook pre-dial

In the on-hook state, enter the number to be dialed. If input error, use the [DEL] key to modify it. if dialed number is OK, press the [BACK] key or Speakerphone key or pick up the handset to dial out.

Delete CID number / Delete All incoming or outgoing CID list

Key (UP) / (DOWN) - get into incoming / outgoing CID list.
Pick the number to be deleted. Press [DEL]
When scrolling incoming or outgoing CID list.
Long press [DEL] key will delete all the CID list.

Ringtone selection and ringer volume adjustment

On-hook state, press [MUTE] key repeatly to select your favorite ringtone, and the LCD will display "RING 01" ~ "RING 08".
At the same time, the phone will go off-hook to demonstrate the selected ringtone. Press [VOL] key to adjust the ringer volume (3 levels) or ringer ON/OFF. LCD
Displays "RINGVOL 1~3 and OFF.

4 Off-hook functions

Incoming CIDs / Outgoing CID inquiry

Off-hook, use [UP] and [DOWN] keys incoming CIDs, and use [OUT] key to check outgoing CIDs.

Music On Hold

During conversation, press HOLD key will put the call in HOLD mode. The other party will hear music in hold mode. To release the hold to go back to conversation mode, lift handset / press [] key.

Speakerphone volume setting

Press [VOL] key in off hook state, Press speakerphone key to adjust the speakerphone volume (2 level), LCD will prompt settings.

Call timing

After picking up the phone and dialing the phone automatically enters the call timer, and the LCD displays the call time.

MUTE function

During conversation, press the [MUTE] key, phone goes into MUTE mode, the other party cannot hear you. LCD will display MUTE indicate the phone in mute state. Press [MUTE] key again to cancel MUTE function.

Redial/Pause function

Pressing [REDIAL] key in the off-hook state before dialing will dial the last outgoing call number. Pressing the [REDIAL] key during dialing or pre-dialling will activate the pause function.

VIP number setting

When checking incoming CIDs and outgoing CIDs, press [REDIAL] key to set the screen number as a VIP number. Press this REDIAL again to cancel the VIP number. VIP numbers will have unique ringtone.(🔒)

Direct Memory (M1 – M3)

To Store
On hook, enter number and long press M1 - M3 to store.
Dial Out
Press M1- M3, unit will automatically dial out.

5 Safety Instructions

Please do not use telephone during thunderstorm.

Installations Environment

1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example,motors or fluorescent lamps).
2. Do not expose to direct sunlight or moisture.
3. Do not install the telephone during thunderstorm.
4. Clean the phone with a soft cloth.
5. Never use a strong cleaning agent or abrasive powder because this will damage this unit.

WARNING : To prevent fire or shock hazard,do not expose this product to rain or any type of moisture.

For sales and service in Asia
contact: info.hopsford.com

6 WARRANTY CARD

18.COM Electronics Pte Ltd.
WARRANTY CARD

Name: _____
Contact No.Tel: _____
Model: _____
Date Of Purchase: _____
Serial No: _____
Dealer's Stamp: _____

Service Centre:
Monday- Friday Opening Hours
9:30am - 12:30pm, 2:00pm - 5:00pm
Tel: 6278 8274

CUSTOMER'S COPY : DO NOT MAIL THIS

1、This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repair services.
2、Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges.
3、This Warranty is invalid if the product has been modified,altered and /or repaired by persons other than technician of our company or mishandled by customer.
4、This warranty is applicable to Singapore only.
5、This warranty does not cover damages caused by natural disasters such as flooding and lightning etc.
6、Customers are requested to collect repaired unit within two months from date of submission.Units not collected after 6 months will be disposed off by the company.

18.COM Electronics Pte Ltd, 159 Sin Ming Road,Amtech Building, #04-01,Singapore 575625